Remote Control Manual LedgeCircle® PIR MinMaxOff



122016 EN E03 - 0120

Description

The HRC-05 provides a fast and easy way to customize settings in LedgeCircle®PIR MinMaxOff fittings. After the settings using the functions as described below. The fixture will emit a beep when a new setting has been received. You can reset or change the settings at any time using the remote or the built-in DIP-switches. The Remote is not compatible with versions of LedgeCircle with a radar sensor.



Permanent On/Off function

This button turns the light ON or OFF and disables the sensor. To change this setting, press "Auto Mode", "RESET" or "Scene mode".



Auto Mode

Pressing this button activates the sensor and reverts all settings to those selected before the light was switched ON/OFF



Reset function

By pressing the RESET button, all settings made with the remote are removed. The fixture reverts to the DIP-switch settings.



Dim +/-

Press and hold + or - to adjust the brightness between 10% and 100% during the Standby Period



Test mode

Press this button to enter Test Mode. In Test Mode Hold Time is reduced to 2 seconds. The Stand-by Period and Daylight Sensor is disabled. Exit Test Mode by pressing "RESET" or- any "Scene mode" or "Hold Time" button.



Detection Range

These options are not available with LedgeCircle fittings.



Standby dimming level

Use these buttons to set you desired dimming level during the Standby period.



Hold-time (Hold Period)

Use these buttons to set the duration of the Hold Period



Standby Period

Use these buttons to set the duration of the Standby Period.



Remote Control Manual LedgeCircle® PIR MinMaxOff





Manual override / Semi-auto mode (absence detection)

This feature is not available with LedgeCircle fittings.





Power output

These button switches output of the fixture between 80% and 100%. This makes it possible to conserve power in rooms or areas where 80% output is sufficient.





Use these buttons to set your desired threshold for the daylight sensor function. When the ambient level of natural light is less than your selected level, the fitting will turn ON.



Lux Disable

Press this button to disable the built-in daylight sensor. Once disabled, the sensor will activate the light when someone is present, regardless of the amount of ambient light.



Daylight Sensor threshold

Press this button to set the lux value currently measured by the sensor as the new threshold for the Daylight sensor. This replaces the previous setting. If the amount of ambient light exceeds this threshold, the light fixture will not turn ON, even when someone is present. This helps reduce the use of electricity when sufficient ambient light is available.



Scene mode

For SC1 - SC4 you can choose between these alternative settings.



Detection Range	Hold Time	Standby Period	Standby Dim Level	Daylight Sensor
100%	1 min	10 min	10%	2 Lux
100%	5 min	10 min	10%	2 Lux
100%	10 min	30 min	10%	10 Lux
100%	10 min	+ ∞	10%	50 Lux